

# T3RRA



## 5.3 | Powering **COMMAND**

September 2026

# Contents

- 5.3 | Powering COMMAND
  - Cab-Mounted ECU
  - Rear-Panel / ISOBUS Mounted ECU
  - Alternative Power Connection

## 5.3 | Powering COMMAND

Select the appropriate power supply method based on ECU mounting location.

### Cab-Mounted ECU

**COMMAND** can be powered using an available cab convenience power socket along with the **T3H-F001** Power Adaptor provided by T3RRA. When mounted in-cab this is the preferred option. If no convenience power outlets are available, consider using a adapter instead of **T3H-F001** if power strip connections are available.



Convenience Power and Power Strip Outlets



T3H-F001



T3H-C002 / T3H-C006 2-pin Power Input

### Rear-Panel / ISOBUS Mounted ECU

If the **COMMAND** ECU is mounted under the rear panel of the tractor, we recommend powering using a Constant Power Harness kit (CNH 115-0172-397/8 OR JD BPF10403/4).




## Alternative Power Connection


Alternatively, connecting to any available switched power studs underneath the cab, making sure to use a **T3H-F003** inline fuse adapter and creating a 2-core cable of appropriate length.



Do **NOT** connect unswitched/battery power to **COMMAND's** power input as this will drain battery while the tractor is switched off.

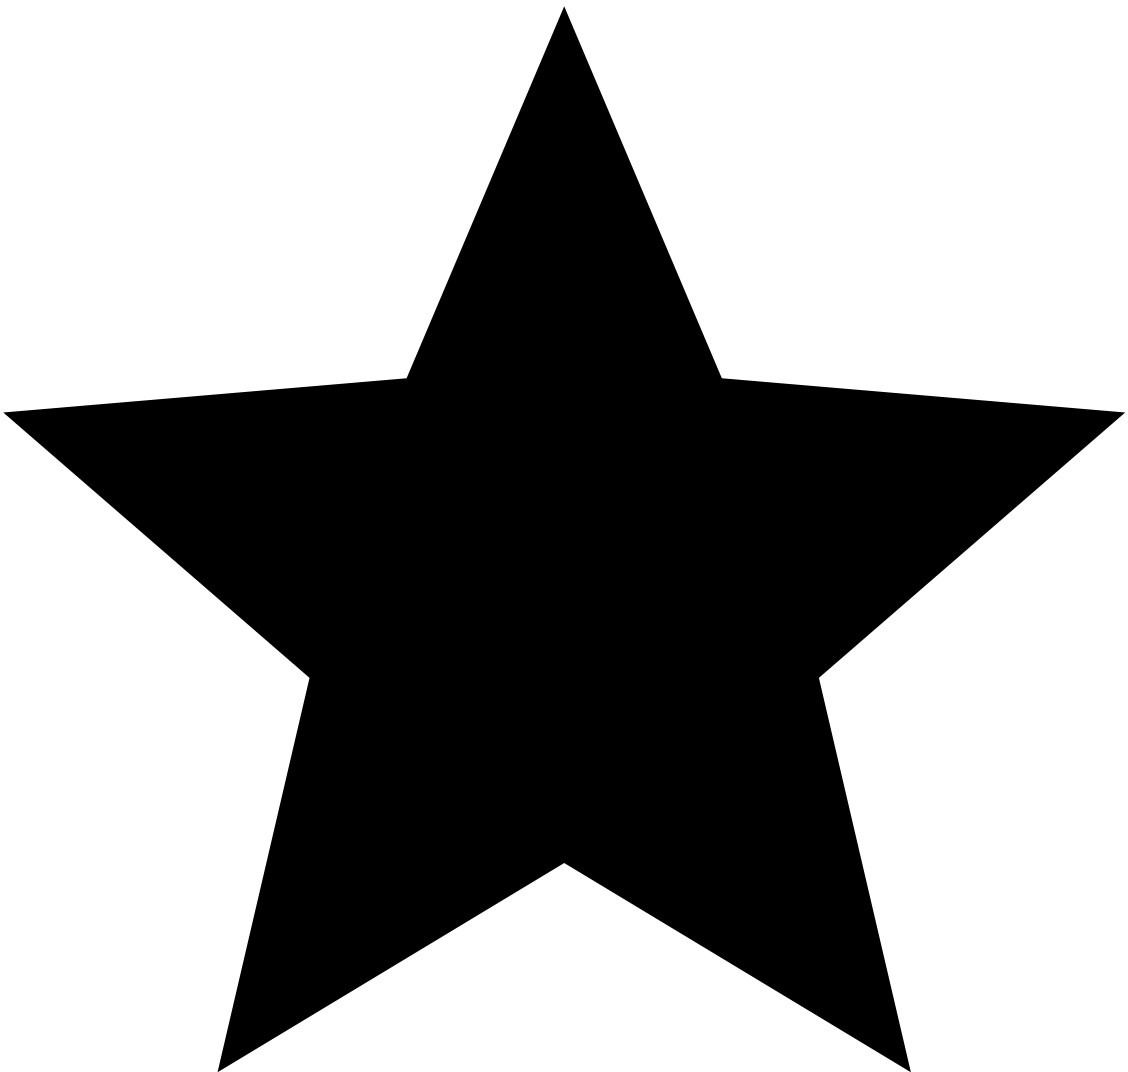

Created 2025-04-07 00:24:40 UTC by Craig

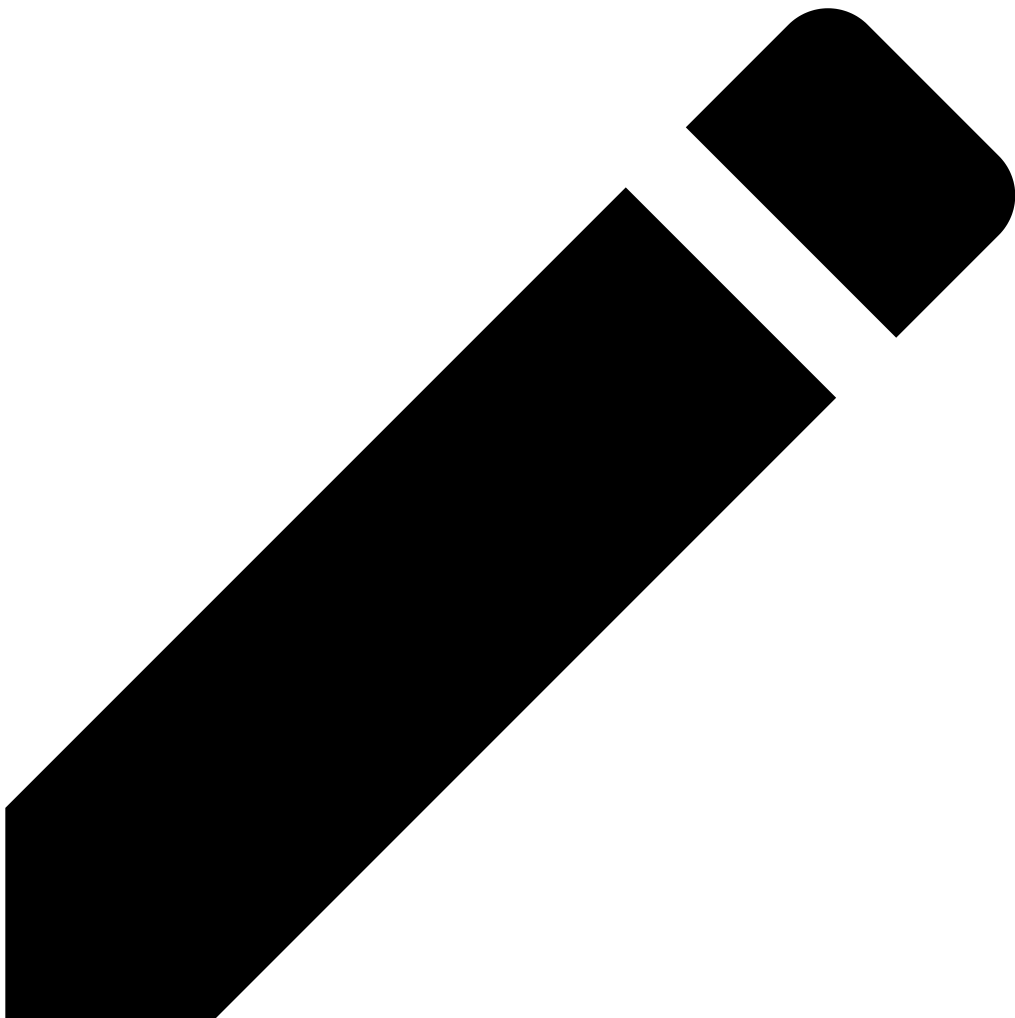

Updated 2026-09-10 00:17:40 UTC by Sathya