


Regular Smoothing

Regular smoothing applies an average

field to remove bumps and dips.

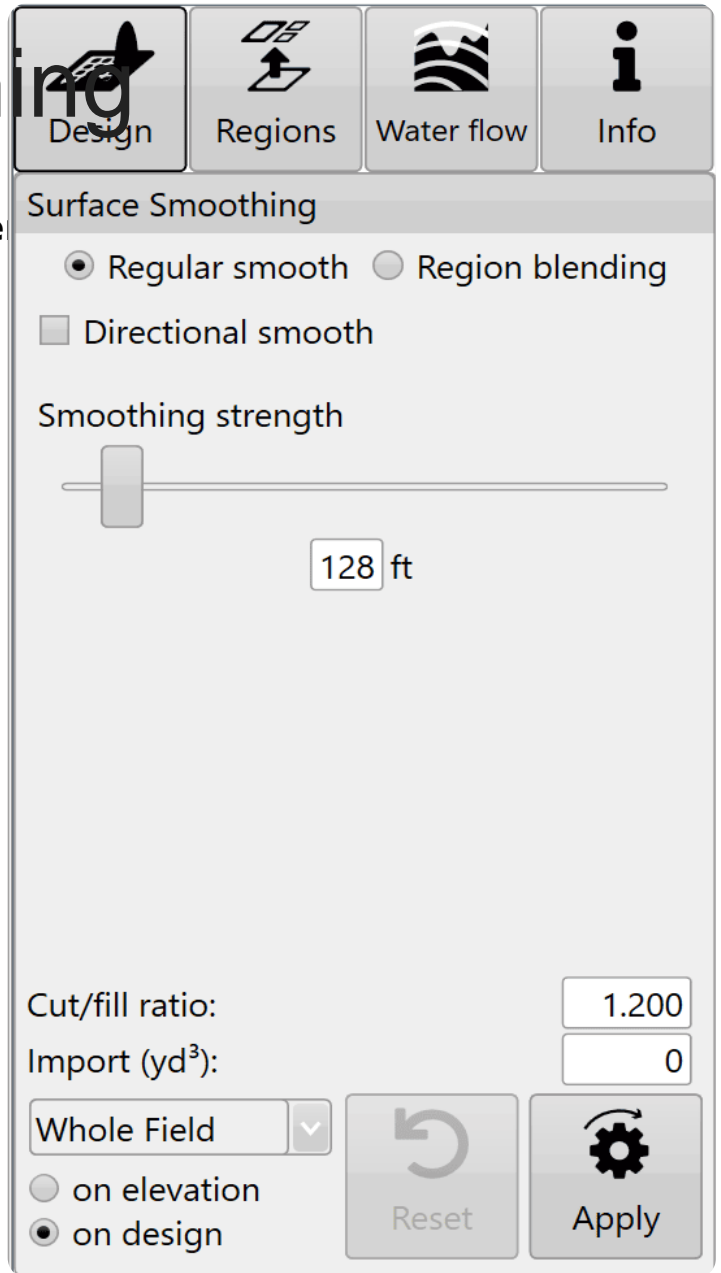

Design Regions Water flow Info

Surface Smoothing

Regular smooth Region blending

Directional smooth

Smoothing strength

128 ft

Cut/fill ratio: 1.200

Import (yd³): 0

Whole Field ▾

on elevation

on design

Reset Apply

The ‘Smoothing strength’ slide bar controls how smooth it is by increasing the radius that is used in calculations. The smaller the

slider value, the less of an effect the smoothing will have.

Smoothing can be applied to the whole field, or to individual regions. It can be applied to the original surface, or to an existing design.
