

# Importing Elevations if you are a John Deere Operator

T3RRA Design Plus can import elevation data from three separate John Deere sources. These are:

- John Deere RCD logs  
These are from Gen3 and earlier John Deere displays (such as the 2630). You would normally download the data from your display using a thumb drive and then copy it to the computer running T3RRA Design Plus. Be sure to copy the entire folder structure, not simply individual files.
- John Deere RCD SWM Survey logs  
Deere customers who have 'Surface Water Pro' may have data in this format. These logs are collected specifically in the tractor as elevation surveys.
- John Deere Gen4 (ADAPT) logs  
These are from Gen4 John Deere displays (such as the 4640). You would normally download the data from your display using a thumb drive and then copy it to the computer running T3RRA Design Plus. Be sure to copy the entire folder structure, not simply individual files.


## Importing Elevations from John Deere RCD logs

**NOTE:** You must have a folder named RCD on your computer for this to work

1. Select the RCD button on the left hand side of the menu bar



2. This will pop up a window, select relevant RCD file and press OK

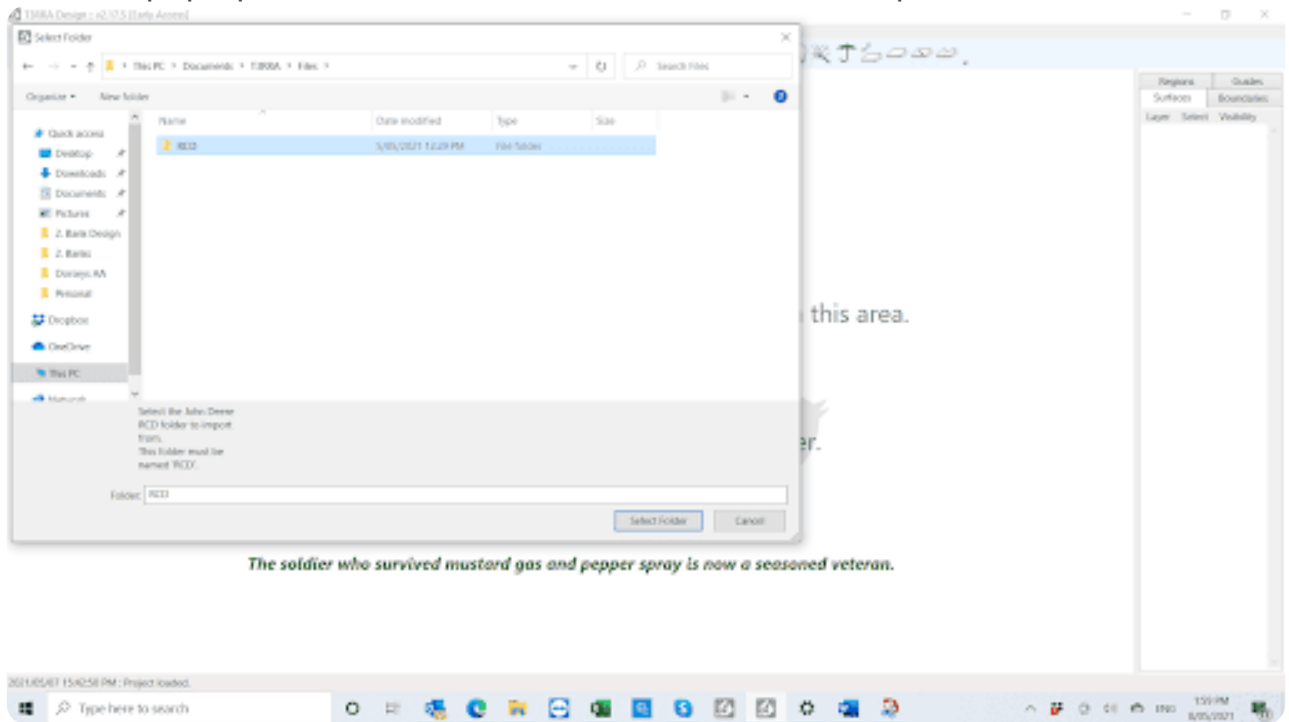

3. Once a file has been selected, press the open button and after a conversion process the elevation surface and identified design surfaces will appear in the working area and the layer selection area.