

Shift Surface



The function of this tool is to horizontally offset whole surfaces. This can be done in whole pixel increments only. It is, however, advisable to avoid the need for this tool by chasing up the correct projection when importing, or to use markers to properly zero and determine your location accurately in the field.
