


Show design surface balance figures

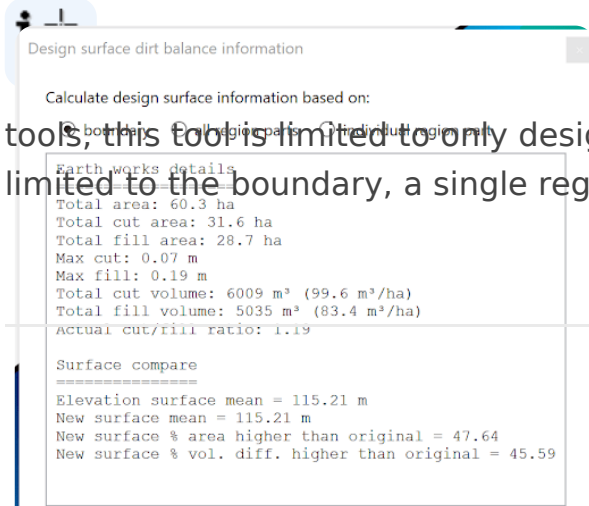

output of the information that is available in other tools, this tool is limited to only design surfaces. This information displayed can be limited to the boundary, a single region or a group of regions.