

Cross Slope not working and Front and Rear Error displays are visible.

Symptoms:

If you are seeing Front Error and Rear Error and you are not using dual scrapers, you may have set up the SCV 1 and SCV 3 incorrectly.




Cause:

You have not set Cross Slope up correctly on the Application controller.

Solutions:

Choose 'Cross Slope Control' for SCV3' from the drop down menu in UCC1.

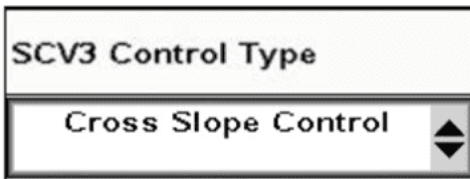

SCV Control Type Drop-down Menu

Check the 'Enable Cross Slope' box in UCC2.

