

Height control jumping in and out of Auto

Symptom:

The height control is jumping in and out of Auto control

Possible causes:

During iGrade setup the system has not been reset and setting in both SCV 1 and 2 causing mixed messages.

Fix:

Turn off the tractor and turn it back on again to reset the system and only the last set setting should remain.
