

T3RRA



5.3 | Widget Customisation

July 2026

Contents

5.3 | Widget Customisation


- Opening Widget Settings
- Changing Displayed Widgets
- Reordering Widgets
- Changing Measurement Units
- Available Widgets

5.3 | Widget Customisation

The widgets along the bottom of the **Apply View** provide quick access to important machine, GNSS and grading information while operating **Level COMMAND**.

Almost every widget can be replaced with another value, allowing the display to be customised to suit different operators, machine configurations or grading tasks.

The **COMMAND Status** widget at the far right of the Apply View is fixed and cannot be changed.

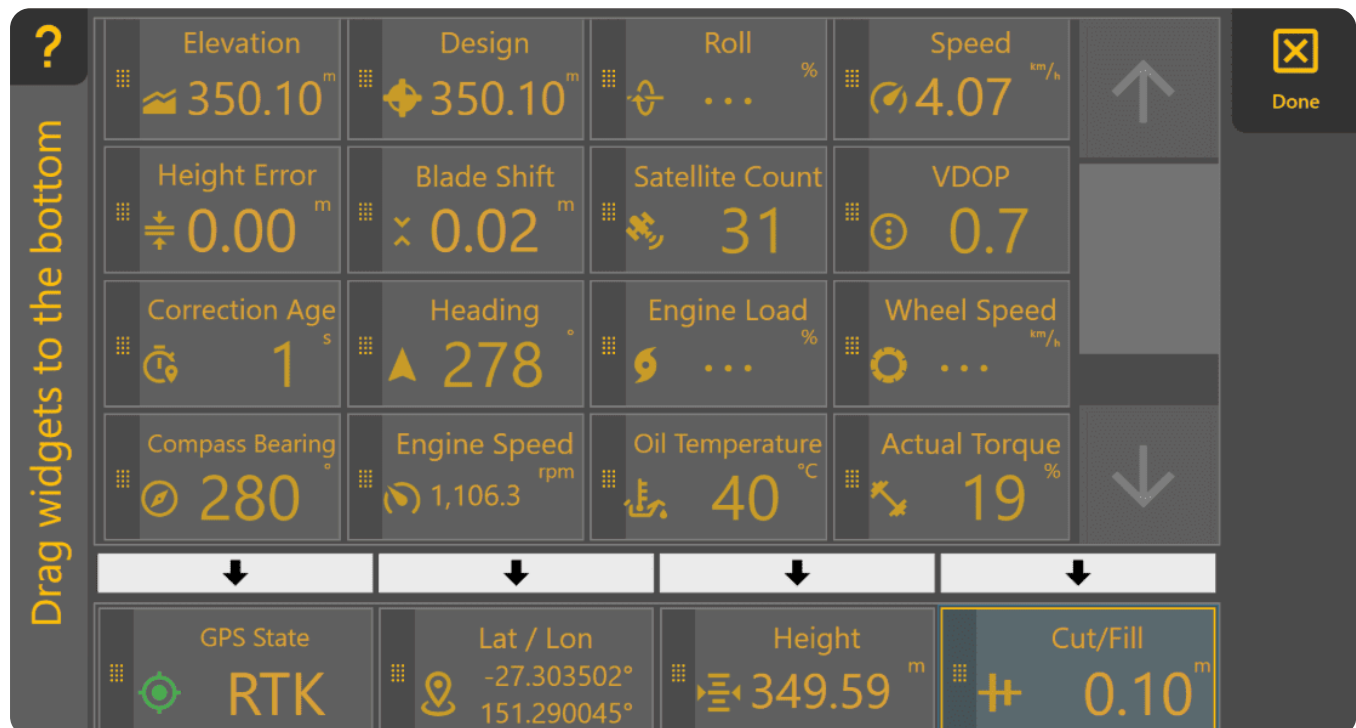

Opening Widget Settings

To customise the displayed widgets:

1. Press and hold any configurable widget along the bottom of the **Apply View**.
2. The **Widget Settings** page will open.

The upper section displays all available widgets, while the lower section shows the widgets currently displayed on the **Apply View**.

Changing Displayed Widgets

Widgets can be replaced using either of the following methods.

Drag and Drop

Press and hold any available widget, then drag it onto one of the widget positions along the bottom of the screen. When released, the selected widget replaces the existing widget.

Arrow Selection

Alternatively:

1. Select the desired widget from the upper list.
2. Press the arrow above the widget position you wish to replace.

This method can be easier when operating with gloves or on smaller displays.

Reordering Widgets

Widgets may also be rearranged by dragging them between positions along the bottom row.

When finished, press **Done** to return to the **Apply View**.

Changing Measurement Units

Many widgets display measurements using configurable units.

To change measurement units:

More → **Units**

The available units depend on the information being displayed.

Available Widgets

Widget	Description
Elevation	Current surveyed ground elevation at the implement location.
Design	Design elevation at the current location.
Height	Current implement height.
Cut/Fill	Amount of cut or fill required at the current location.
Height Error	Difference between the current implement height and the target height. Persistent error may indicate incorrect valve calibration or that the implement cannot physically reach the target.

Blade Shift	Displays the current Blade Shift offset applied to the target surface. This widget displays the active offset only; Blade Shift is adjusted using the Blade Shift control on the Apply View .
Speed	Current machine speed.
Heading	Current direction of travel relative to north.
Latitude / Longitude	Current GNSS position.
Roll (X-Slope)	Current implement roll angle.
Target Roll	Target roll angle defined by the design surface.
Roll Error	Difference between the measured roll angle and the target roll angle. Useful when monitoring X-Slope performance.
GNSS Status	Current GNSS positioning quality. RTK provides the highest positioning accuracy.
Satellite Count	Number of satellites currently being tracked. Some receivers may report fewer satellites than are actually contributing to the position solution.
VDOP	Vertical Dilution of Precision. Lower values generally indicate better vertical positioning accuracy.
Correction Age	Time since the last RTK correction was received. Lower values indicate a healthier correction link.
Actual Torque*	Engine torque currently being produced.
Demanded Torque*	Engine torque currently being requested.
Engine Load*	Current engine load as a percentage.
Engine Speed*	Current engine speed (RPM).
Oil Temperature*	Hydraulic oil temperature.
Compass Bearing*	Vehicle heading reported by the machine.
Wheel Slip*	Estimated wheel slip percentage. Higher values indicate reduced traction.

*Available only when supported by the connected machine CAN network.



Operator Tip: Configure the widgets you check most often so they can be read with a quick glance while grading. Some operators keep **GNSS Status**, **Height**, **Cut/Fill** and **Current Blade Shift** permanently visible, then customise the remaining widget to suit the current task.

Continue to **5.4 | Surface & Map Visualisation** to configure the appearance of the **Work Area Display** within the **Apply View**.