


Autodrains Tool

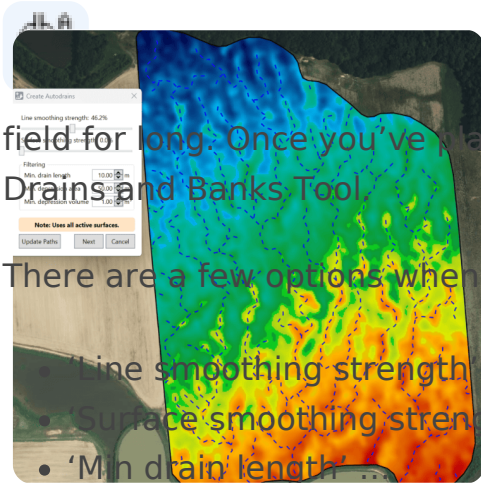

...ly place drains that will ensure water doesn't stay on the field for long. Once you've placed the drains, you can design them as normal with the Drains and Banks Tool.

There are a few options when creating auto drains:

- 'Line smoothing strength' smooths small kinks from the paths created.
- 'Surface smoothing strength' ...
- 'Min drain length'
- ...

After making changes, click 'Update Paths' to view the effect, and click 'Next' when you're happy with the results.

Create Layer from Autodrains [Close]

Which layer would you like to create from these autodrain paths?

Edit layer after creation

Back **Create Guides** **Create Drains** **Cancel**

Create Autodrains [Close]

Line smoothing strength: 46.2%
[Slider]

Surface smoothing strength: 0.0%
[Slider]

Filtering

Min. drain length	10.00	[Up/Down]	m
Min. depression area	50.00	[Up/Down]	m ²
Min. depression volume	1.00	[Up/Down]	m ³

Note: Uses all active surfaces.

Update Paths **Next** **Cancel**